

### Description:

Unique 6-way action lubricates, penetrates, demoiseures, protects, prevents corrosion, and acts as an anti-seize. Perfect for automotive maintenance, industrial maintenance, master mechanics, and heavy equipment shops. Apply during assembly to prevent rust, corrosion, seizing, and binding. Apply during disassembly to penetrate, lubricate, and demoiseurize frozen, rusty parts.



### Benefits:

- Displaces water -- Removes moisture on contact and provides a long-term anti-corrosion seal
- Eliminates squeaks -- Lubricates metal-on-metal moving parts
- Non-conductive -- Dielectric strength of >45,000 volts
- Loosens frozen parts -- Penetrates rust, corrosion, and oxidation
- Protects metal -- Seals out salt, rust, moisture, and dirt
- Prevents corrosion -- Long-lasting lubricant resists water
- USDA H2
- Conforms to US Military Specification MIL-C-81309E  
(Cover requirements of an ultra-thin film, water displacing, corrosion preventive compound)

### Application:

**(NOTE: Miracle Man can be applied using solvent resistant sprayers)**

**Before you take it apart:** Spray all nuts, bolts, pins, retaining rings, threaded and sliding members with Miracle Man before dismantling.

**Before you put it together:** Spray all parts with Miracle Man before putting them back together. They will go together easier, will not rust, corrode, or bind.

**Treat hard-to-get-at parts:** Heaters, door mechanisms, brakes, and similar equipment that require dismantling to stop squeaks because of the inaccessibility of parts, can often be effectively repaired by spraying Miracle Man through openings. If equipped with electric motors, spray while motor is running so that spray is drawn into the equipment.

**Stops and prevents corrosion on:** Battery terminals and hold down brackets, chrome plates, parts, and tools.

**Removes moisture from:** Distributor, ignition wires, spark plugs, generators, and starter motors.

**Ignition system:** If moisture from condensation, splashing, or immersion shorts out ignition system, spray Miracle Man on all wires from coil to spark plugs. Remove distributor cap and spray inside of cap and on rotor and breaker points. Moisture will be forced out in a short time and spark will be restored.

**Loosen and lubricates:** Nuts, bolts, mufflers, manifolds, heat risers, engine heads, brake adjusters, U-bolts, tie rod connections, windshield wipers, linkage, locks and latches, door and panel hinges, front end adjustments, control cables, aerals, electric motor rotors, and commutators.

**Lubricates and eliminates squeaks on:** Door and panel hinges, brake pedal pivots, rubber bushings, throttle controls, carburetor linkage, brake assembly, hand brake cables, and movable seat channels.

### Specifications:

Density @ 25°C (ASTM-D-287).....	0.900 g/mL
Color .....	Light Amber
Appearance.....	Clear
Odor.....	Petroleum odor
Health/Flammability/Reactivity.....	2/2/0
Personal Protection.....	B - Safety glasses



# MOMAR

## MOMAR

8 Induland Crescent, Lansdowne, Cape Town  
Tel: 021-6921295 - Fax: 021-6913898  
info@momar.co.za - www.momar.co.za